


# Sewing Tutorial Carry Bags

by Cherry Picking

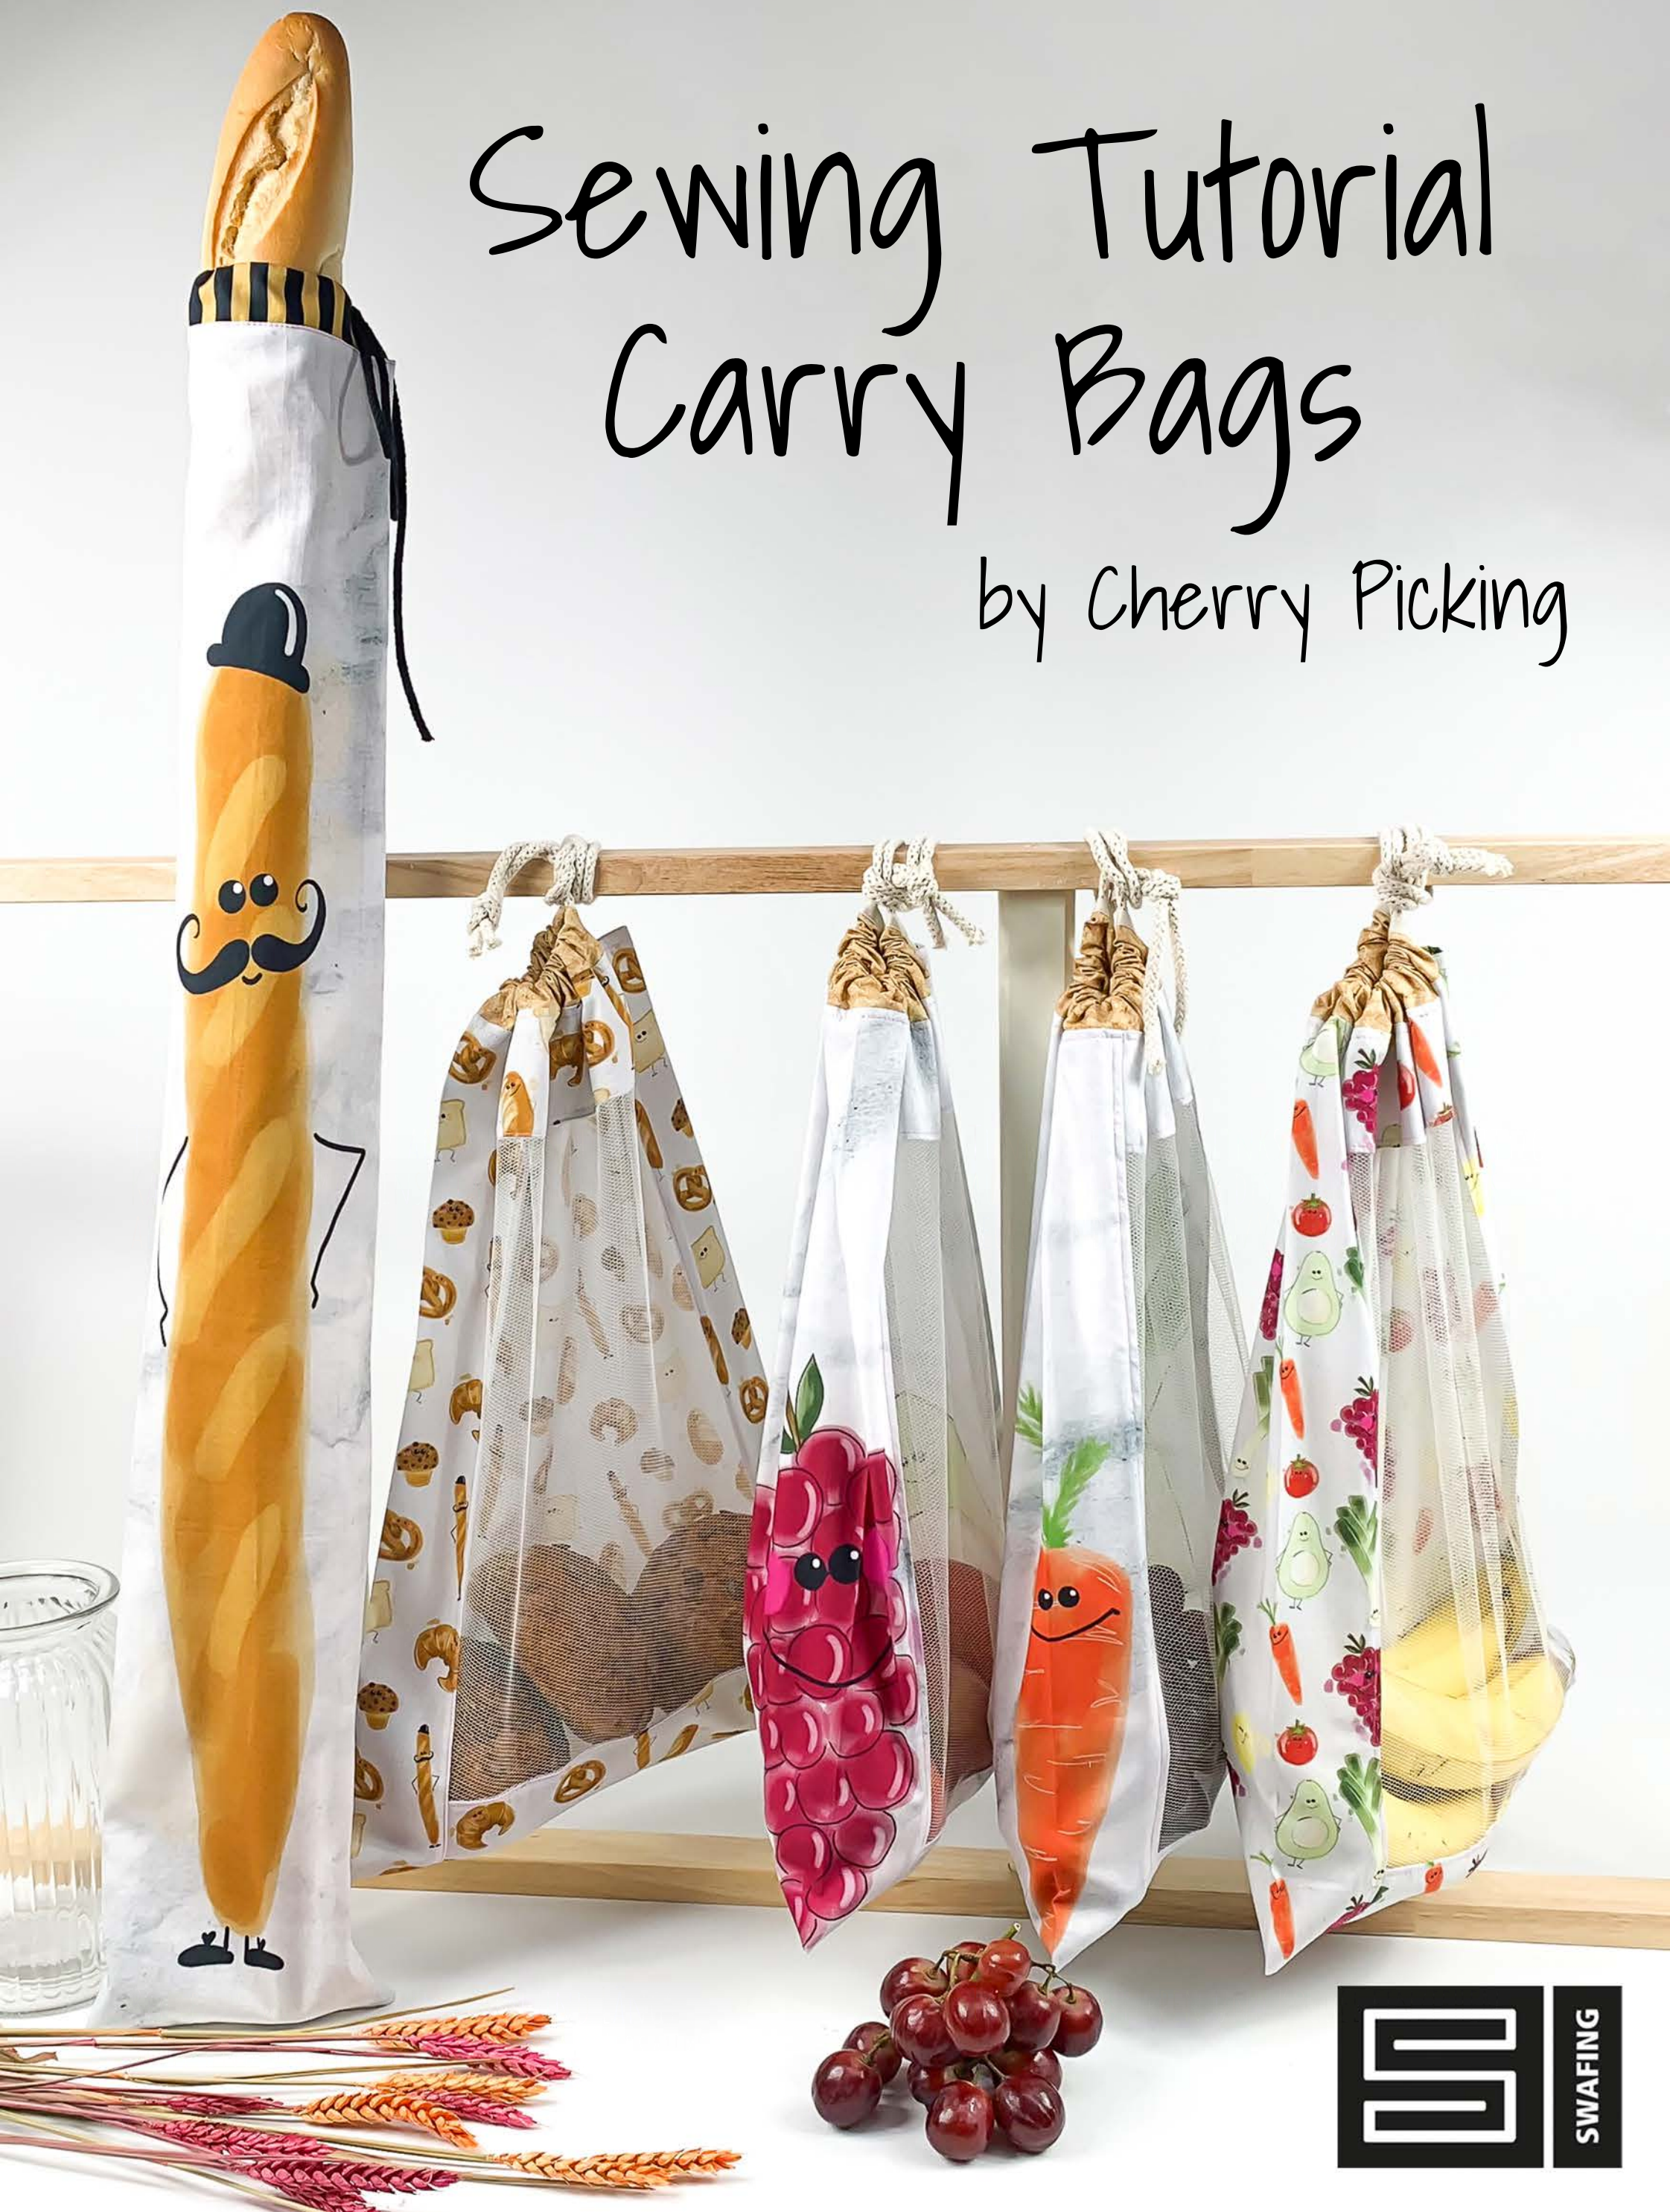



# SEWING TUTORIAL

## "CARRY BAGS"

BY CHERRY PICKING

### BAGUETTE BAG



FOLD OVER ENDS OF THE CASING PIECES 5 MM TWICE, PRESS AND STITCH.



FOLD THE CASING PIECE IN HALF LENGTHWISE, WRONG SIDES TOGETHER. CENTER THE OPEN CASING EDGE TO THE UPPER BAG PIECE EDGE AND PIN RIGHT SIDES TOGETHER. STITCH AND FINISH THE SEAM.



FOLD THE BAG IN HALF LENGTHWISE RIGHT SIDES TOGETHER. STITCH AND FINISH THE SIDE AND BOTTOM SEAMS.



PRESS THE CASING SEAM AND TOPSTITCH. INSERT DRAWSTRING AND TIE ENDS.

# SEWING TUTORIAL

## "CARRY BAGS"

BY CHERRY PICKING

### ZERO WASTE BAG WITH MESH WINDOW - PAGE 1



STITCH SHORT FRAME PIECES TO THE UPPER AND LOWER MESH WINDOW EDGES. FINISH THE SEAM ALLOWANCES.



PRESS THE SEAM ALLOWANCES TOWARD THE FRAME PIECES AND TOPSTITCH.



STITCH WINDOW PIECE TO THE BAG EDGES RIGHT SIDES TOGETHER. FINISH THE SEAM ALLOWANCE.



PRESS THE SEAM ALLOWANCE TOWARD THE BAG BACK PIECE AND TOPSTITCH.



# SEWING TUTORIAL

## "CARRY BAGS"

BY CHERRY PICKING

### ZERO WASTE BAG WITH WINDOW - PAGE 2



STITCH OPPOSITE BAG SEAM AND FINISH THE SEAM ALLOWANCE.



STITCH BAG BOTTOM SEAM AND FINISH THE SEAM ALLOWANCE.



PREPARE THE DRAWSTRING CASING AS SHOWN FOR THE BAGUETTE BAG. CENTER THE CASING OVER ONE SIDE SEAM, STITCH TO THE BAG AND FINISH THE SEAM ALLOWANCE.



PRESS THE CASING SEAM ALLOWANCE TOWARD THE BAG PIECE AND TOPSTITCH. INSERT DRAWSTRING AND TIE ENDS TOGETHER.